


Please read carefully before installation


** WASTE MUST BE HAND TIGHTEN ONLY **

- Basin must be fitted by a licensed installer and according to this guide or warranty will be void.
- Waste must be hand tighten ONLY. Cracking due to improper installation will not be covered.
- Please inspect product for any damages prior to installing.
- Please avoid placing any tools in the basin to prevent any damages to the basin and sealer.
- To understand what is and isn't covered by Mayde Concrete, please refer to our warranty page.

Using clear 100% silicone sealant, apply a continuous bead to all the areas shown here in red.

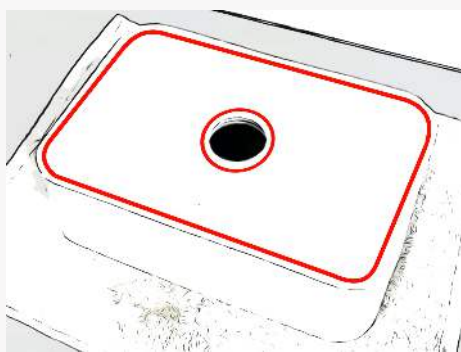

1. Place basin upside down onto a towel and apply near the edge and near the waste hole.

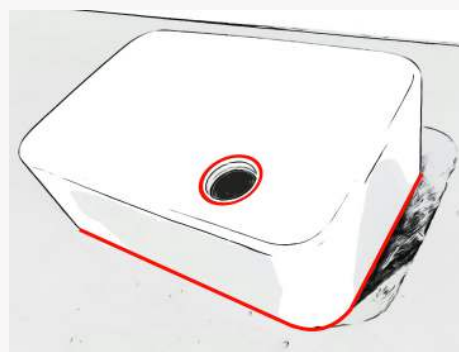

2. Once basin is in position, apply all along the outside edge and along the waste hole.



3. Drop in the waste and run a small bead around the edge of waste and basin.

Rubber thread must be used on both top and bottom of waste



4. Apply to rubber thread at the bottom of the waste and finish by ONLY hand tightening. Over tightening may cause the basin to crack.

Wipe away all excess sealant before it sets using a warm damp cloth with mild detergent. Do not use any harsh chemicals or abrasive scrubs on the basin.

Leave to dry for at least 24 hours before water testing.